

# I would like to create SSH connection with newly purchased URVE board PI. What is the root password for the initial connection

Default credentials:

Login: linaro

Password: linaro

---

Revision #3

Created 13 March 2023 06:21:12 by Lukasz Nuckowski

Updated 26 September 2023 12:33:47 by Adrian Porada